

English

HORI Wireless HORIPAD

for Steam

Instruction Manual

Thank you for purchasing this product.
Before using this product, please read the instructions carefully.
After reading the instruction manual, please keep it for reference.



Table of Contents

Quick Start Guide	2-4
▸ For Bluetooth® wireless connection	
▸ Wired Connection	
Contents	5
Compatibility	5
Layout and Features	6-7
Steam Mode / XInput Mode	8-9
Analog Mode / Digital Mode	9
Caution	10
Regarding Wireless Interference	11
Regarding Battery	11
Specifications	12

Quick Start Guide

 


Do not touch the analog sticks when pairing or connecting. This may result in miscalibration.

This product recalibrates the analog sticks when connecting the device.


For Bluetooth® wireless connection

- 1** Please set the switch on the back of the controller to Steam Mode.

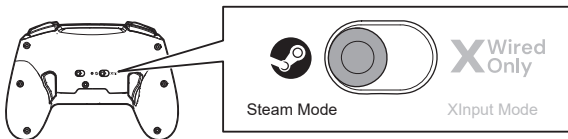

Steam Mode / XInput Mode
⇒ p.8-9

 - 2** Please charge the controller first. After charging, please disconnect the cable before using.

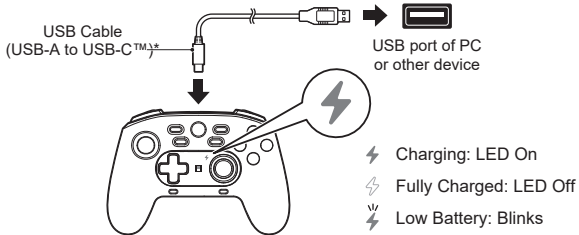


*Please use only the included cable.

- 3** If your PC is not equipped with Bluetooth®, please use the included Bluetooth® adapter. After connecting the Bluetooth® adapter, please make sure that the Bluetooth® setting on the PC is turned on.



4 Please turn the controller power ON.

 
Press and hold for 3 seconds

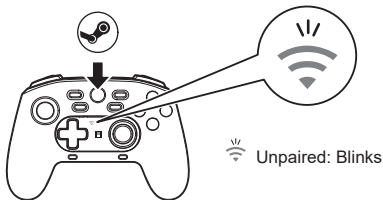

After pairing for the first time, the device will automatically connect when turned on.

5 Pair the controller with a PC or Steam Deck™.

 Press and hold for 3 seconds

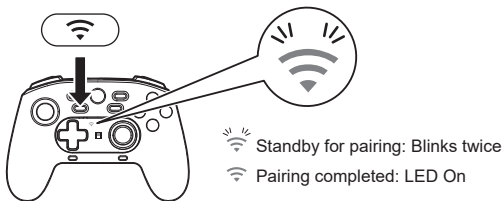

The following Bluetooth® device name will be displayed.

[HORIPAD STEAM]

- The name may change depending on the operating system of your PC.
- The Bluetooth® connection procedure differs depending on the PC being used. Please refer to your PC user manual.

 
- After pairing is completed, the device enters the pairing standby if the pairing button is pressed and held more than 3 seconds.
- Press and hold the Steam Button until the pairing LED turns off to turn the controller off.
- If not paired, the controller will automatically turn off after 90 seconds.
- The controller will automatically turn off if it is not used for 15 minutes.

Wired Connection


If the controller is turned on, please turn the power OFF.

- 📶 On: Blinking or on
- 📶 Power off: LED Off

Press and hold until light turns off.

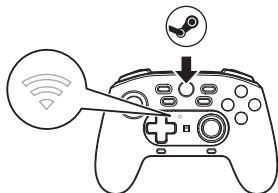


 - 1 Select the mode with the switch on the back of the controller:

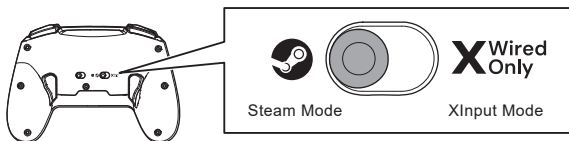

Steam Mode / XInput Mode
⇒ p.8-9

 - 2 Connect the controller to your PC or Steam Deck™ Docking Station* with the included USB cable.

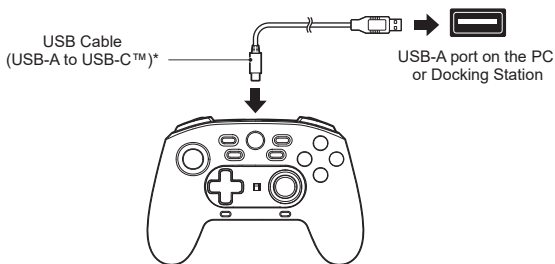


*The Docking Station (sold separately) allows Steam Deck™ to connect to external displays, wired networks & USB devices.

Contents



 Controller
x 1



USB Cable
(USB-A to USB-C™)
x 1



Bluetooth® Adapter
(USB-A)
x 1



Instruction Manual
x 1

Compatibility

PC

Supported OS	Windows 10 / 11
Input Method	XInput* / DirectInput
System Requirements	USB-A Port

 
 
*XInput functions only when using the wired USB connection.

 
 
Steam Deck™

Wireless Connection via Bluetooth® or Wired Connection via USB Cable (Type-A to Type-C™) via docking station (sold separately).

Layout and Features


- ★ ... This button allows the companion app to assign other button functions when in XInput Mode.
- () ... Button function in XInput Mode.
- ▲ ... Cannot be used in XInput Mode.

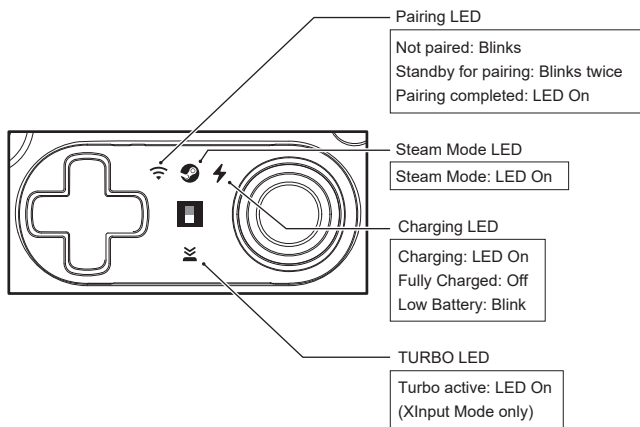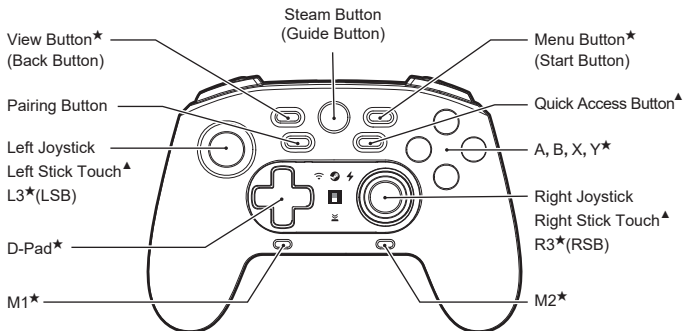

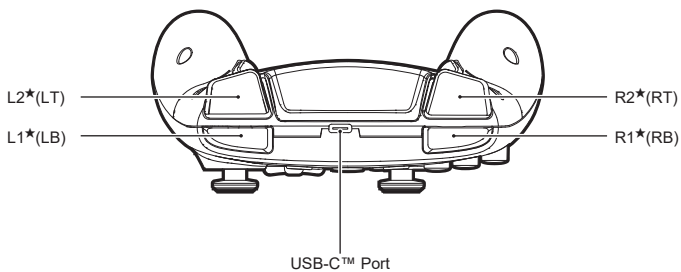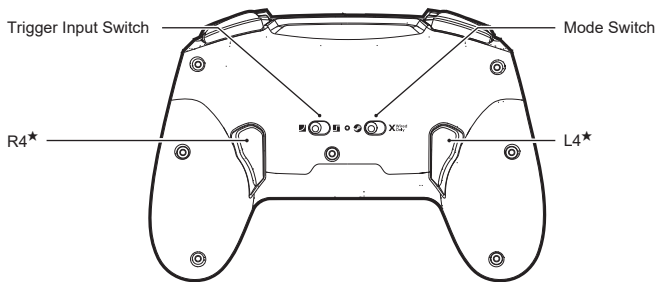

Steam Mode / XInput Mode

 Steam Mode

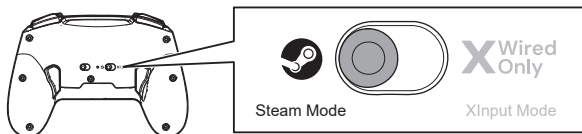

The following functions are available.

Capacitive Touch Thumbsticks

Enable to activate assigned function when touching the analog thumbsticks.



 
Quick Access Button

A menu with simple settings is displayed.

Click and see how to customize on Steam.

<https://stores.horiusa.com/hpc-055/support/>



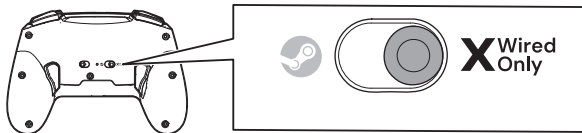

App for XInput Mode [HORI Device Manager]

Adjust button settings, Turbo settings, analog stick sensitivity settings, and more.


■ Download App

<https://stores.horiusa.com/hpc-055/app/>

Supported OS	Windows 10 / 11
System Requirements	USB-A Port



 Analog Mode / Digital Mode

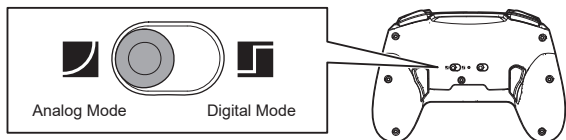

Digital Mode

The trigger buttons (L2 and R2) are digital (on / off) like typical buttons.

Analog Mode

Switches the L2 and R2 trigger buttons to Analog Input mode for gradual analog input.*

*Digital Mode may work better for certain software titles, so please try each mode to determine the best input method.



Caution

Parents / Guardians:

Please read the following information carefully.

- Indoor use only.
- This product contains small parts. Keep away from children under 3 years old.
- Keep this product away from small children or infants. Seek medical attention immediately if any small parts are swallowed.
- Long cord. Strangulation hazard.
- Keep the product away from dusty or humid areas.
- Do not apply strong impact or weight on the product.
- Do not use this product if it has been damaged or modified.
- Do not get this product wet. This may cause an electric shock or malfunction.
- Do not place this product near heat sources or leave under direct sunlight for an extended period. Overheating may cause malfunction.
- Please use this product where the room temperature is 0-40°C (32-104°F).
- Do not touch the metal parts of the USB plug.
- Do not use this product with a USB hub or extension cable. The product may not function properly.
- Do not insert the USB plug into socket-outlets.
- Do not pull the cable to unplug the controller from the console. Doing so may cause the cable to break or become damaged.
- Be careful not to get your foot caught on the cable. Doing so may cause bodily injury or damage to the cable.
- Do not bend the cables roughly or use the cables while they are bundled.
- Please be careful that children do not play with the cable wrapped around their necks or body.
- Do not disassemble, modify or attempt to repair this product.
- If product needs cleaning, use only a soft dry cloth. Do not use any chemical agents like benzene or thinner.
- The packaging must be retained since it contains important information.
- Please retain this instruction manual for your future reference.
- The normal function of the product may be disturbed by strong electro-magnetic interference. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function does not resume, please relocate to an area which does not have electro-magnetic interference to use the product.
- Do not use this product for anything other than its intended purpose. We are not responsible for any damage or malfunction when using other than the intended purpose.

Regarding Wireless Interference

Please do not use this product where wireless devices are prohibited or near electrical devices such as cardiac pacemakers, medical devices, fire alarms or other emergency equipment. Wireless signals may interfere with such devices and cause accidents.

Regarding Battery

If the battery leaks, please do not touch the liquid or battery with your bare hands. Do not place this product near heat sources or leave in direct sunlight. Internal battery life may deplete over time.

- Please be aware of the following during use and storage.
 - Do not place the product in or near fire.
 - Keep this product away from the following high temperature areas:
 - Near heaters, heat sources, or in direct sunlight
 - Heated carpets or on top of home theater equipment
 - Avoid using outdoors or inside a car during hot weather.
- Do not charge this product other than by its specified method. The built-in battery may overheat or rupture which may cause a fire or malfunction.
- Do not charge this product during a thunderstorm, as there may be risk of electric shock.
- Keep USB connector away from metal objects. This may cause malfunction or electric shock.
- Never disassemble, repair or modify this product. There is risk of fire, electric shock, battery rupture, or overheating.
- Do not drop, step on, crush, or strike the product with strong force. This may cause fire, battery rupture, overheating, or electric shock.
- Do not let liquid or foreign matter to enter the product. It may cause fire, electric shock, or malfunction. If any liquid or foreign matter gets inside the product, stop using the product immediately and contact our customer support.
- Keep the product away from water and do not use with wet or oily hands. It may cause electric shock or malfunction.
- Keep the product away from humid, dusty, or smoky areas. It may cause electric shock or malfunction.
- Keep the USB connector away from foreign matter or dust. It may cause electric shock, malfunction, or contact failure. Use a dry cloth to wipe off any foreign matter or dust.
- Charge this product where the room temperature is 10 - 35°C (50 - 95°F). Charging outside this temperature range may result in the product not charging properly or prolong the charging time.
- Please note that as with any rechargeable battery, the maximum amount of charge the battery can hold will gradually lessen over time after many charge cycles.
- If the battery life is significantly reduced or will not hold a charge it is possible the battery is at the end of its life.
- Recharge the battery at least once every three months to maintain function even if it has not been used for a prolonged time.



Li-ion 00

The Lithium Ion battery is made from recyclable resources.

Specifications

Controller

External Dimensions	: W 6.1 × D 4.3 × H 2.3 in / W 15.5 × D 11 × H 6 cm
Weight	: 0.4 lbs / 185 g
Connection Method	: Wireless Connection via Bluetooth® USB-A wired connection
Charging Time	: 3.5 hours* *Actual charging time may vary.
Battery Life	: 12 hours* *The usage time may be significantly shortened depending on the usage environment.
Wireless Range	: 33 ft / 10 m* *Wireless range may vary significantly depending on the operating environment.
Operating Frequency	: 2.4 GHz
Sensor	: Gyro Sensor, Capacitive Touch Thumbsticks

USB Cable

Cable Length	: 9.8 ft / 3 m
Connection Method	: USB-A to USB-C™

The controller does not have the following functions:

- Vibration function
- Trackpad
- Headset Jack

Actual product may differ from image.

The manufacturer reserves the right to change the product design or specifications without notice. ©2024 Valve Corporation. Steam, Steam Deck, and the Steam logo are trademarks and/or registered trademarks of Valve Corporation in the U.S. and/or other countries.

"Bluetooth" is a registered trademark of Bluetooth SIG, Inc.

USB-C is a registered trademark of USB Implementers Forum.

HORI & HORI logo are registered trademarks of HORI.

All other trademarks are the property of their respective owners.